




# REPLACING HANDLE ON DP110T

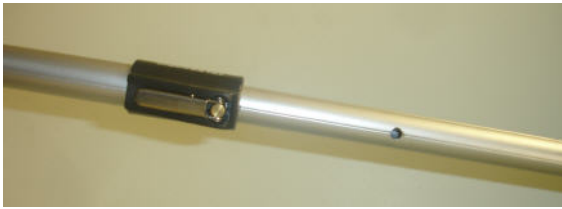

1..... Unlock shaft and telescope to a point between locking holes

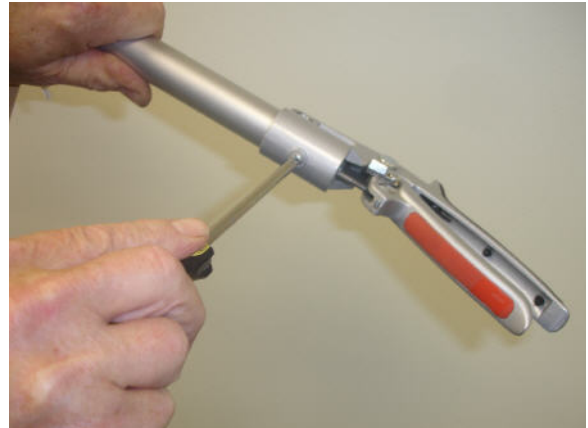

2.....undo screw on underside of handle

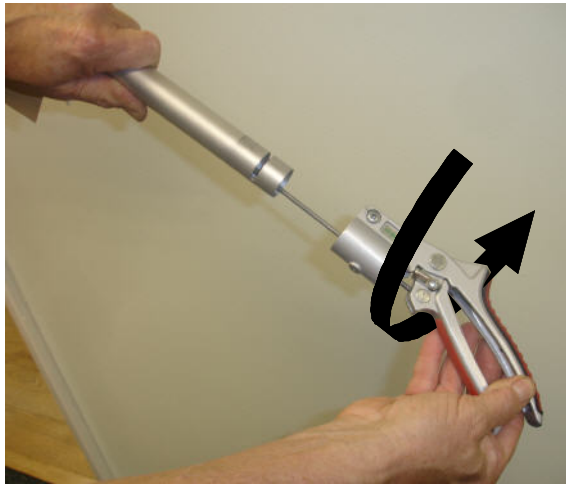

3...Pull handle slightly away from shaft and hold internal rod whilst unscrewing handle



4.....Remove handle completely and screw on new handle

5... Three or four complete turns is normally sufficient but when the tool is completely re-assembled if the locking mechanism is too slack you will need to remove the screw again and rotate the handle once again to rectify. Alternatively if the lock will not engage then the handle needs to be slackened.

Should you experience any difficulty in implementing the above please call our customer helpline on

**01753-547790**