

# REPLACING LOCKING MECHANISM OF DP560 OR DP570



1....To remove bung at bottom of pole, use the handle of a spoon to break any seal to the pole



2.....Once bung is removed the tubing is visible and the 2 indentations which prevent the inner pole coming out. The indentations should be carefully straightened with a pair of pliers



3....Ease the internal pole out of the bottom which exposes the simple locking mechanism.



4.....Remove the locking ring and clean or replace as necessary.

5.....Re-assemble in reverse order being careful when re-indenting the pole base.  
Do not use oil.

## **NOTE**

Please note that it is impossible to replace the locking mechanism to the smallest of the three poles on DP570

Should you experience any difficulty in implementing the above, please call our customer helpline on  
**01753 547790**